

# Eagle Pneumatic Mark II Air-Lift System



The Eagle Pneumatic Mark II Air-Lift System, a durable and supremely reliable pressure/vacuum system, requires power only at one end of the system. Located at either end of the system, the send/receive station is called the “power pedestal.” The system moves carriers in one direction using pressure and with vacuum power on return, resulting in a highly dependable “push-pull” system operation.


The installation of intermediate stations provides you the capability to expand your system, enabling even greater flexibility. In addition, the send/receive station at the non-powered end makes no noise.

The Eagle Pneumatic Mark II Air-Lift System is designed for a wide range of industrial, retail and commercial applications. Call your Eagle Pneumatic dealer today.



# Eagle Pneumatic Mark II Air-Lift System

## Mark II Powered Station

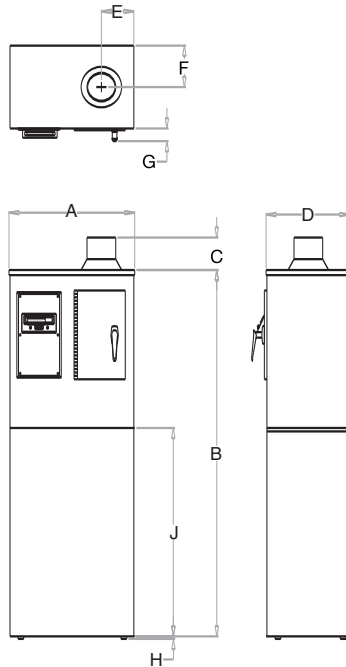


### DIMENSIONS

| System Size | 3"      | 4"      | 6"      |
|-------------|---------|---------|---------|
| <b>A</b>    | 17 1/8" | 18 1/8" | 18 1/8" |
| <b>B</b>    | 46 3/8" | 53 7/8" | 53 7/8" |
| <b>C</b>    | 4 3/4"  | 4 3/4"  | 4 3/4"  |
| <b>D</b>    | 9 3/8"  | 12 1/8" | 12 1/8" |
| <b>E</b>    | 4"      | 5 3/4"  | 5 1/4"  |
| <b>F</b>    | 4 1/8"  | 6"      | 6"      |
| <b>G</b>    | 1 7/8"  | 1 7/8"  | 1 7/8"  |
| <b>H</b>    | 3/4"    | 3/4"    | 3/4"    |
| <b>J</b>    | 30 3/8" | 30 3/8" | 30 3/8" |

### ELECTRICAL REQUIREMENTS

**Power, all models:** 115V, single-phase, 60 Hz  
U.L. Approved

## Mark II Non-Powered Station

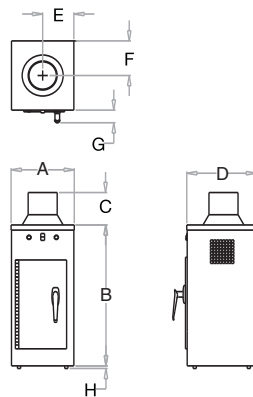

### DIMENSIONS

| System Size | 3"      | 4"      | 6"      |
|-------------|---------|---------|---------|
| <b>A</b>    | 9 1/4"  | 9 1/4"  | 10 1/4" |
| <b>B</b>    | 20 5/8" | 20 5/8" | 23 1/8" |
| <b>C</b>    | 4 3/4"  | 4 3/4"  | 4 3/4"  |
| <b>D</b>    | 10 1/8" | 10 1/8" | 11 1/8" |
| <b>E</b>    | 4 5/8"  | 4 5/8"  | 5 1/8"  |
| <b>F</b>    | 4 3/4"  | 4 3/4"  | 5 7/8"  |
| <b>G</b>    | 1 7/8"  | 1 7/8"  | 1 7/8"  |
| <b>H</b>    | 3/4"    | 3/4"    | 3/4"    |

### DOWN SEND STATIONS AVAILABLE

\* Requires control cable between stations.



**Eagle Pneumatic, Inc.**  
3902 Industry Boulevard  
Lakeland, Florida 33811  
Tel: 863.644.4870  
Tel: 800.237.8261  
Fax: 863.647.5328

E-mail: [sales@eaglepneumatic.com](mailto:sales@eaglepneumatic.com)  
[www.eaglepneumatic.com](http://www.eaglepneumatic.com)